

Specify the tolerance of a control variable.

Keyword:**@CONTROL_TOLERANCE****Usage:**

This specification sets the tolerance parameter for a control variable. The value is not modified when the mode terminates.

Data Fields:

variable	variable label or macro for speed and torque. Options are SPEED_VAR and TORQUE_VAR.
tolerance	control tolerance (units required)

Example Specification:

```
@CONTROL_TOLERANCE
  #variable          tolerance
  SPEED_VAR         50[rpm]
  TORQUE_VAR        20[lb_ft]
  int_man_f         5[deg_f]
```