



CyFlex® Knowledge Article

Disabling Efficiency Cores in the BIOS

Author: Luke Przybyla


April 23, 2026

Overview


Enabled efficiency cores in the BIOS can cause system instability when intensive applications are placed on them. This Knowledge Article describe the procedure to disable efficiency cores in the BIOS to prevent such system instability.

Procedure

1. Enter BIOS on Boot
2. Select **Advanced** at the top at the top of the screen.
3. Select **CPU Configuration**.
4. Select **No. of CPU E-Cores Enabled** as in the following figure.

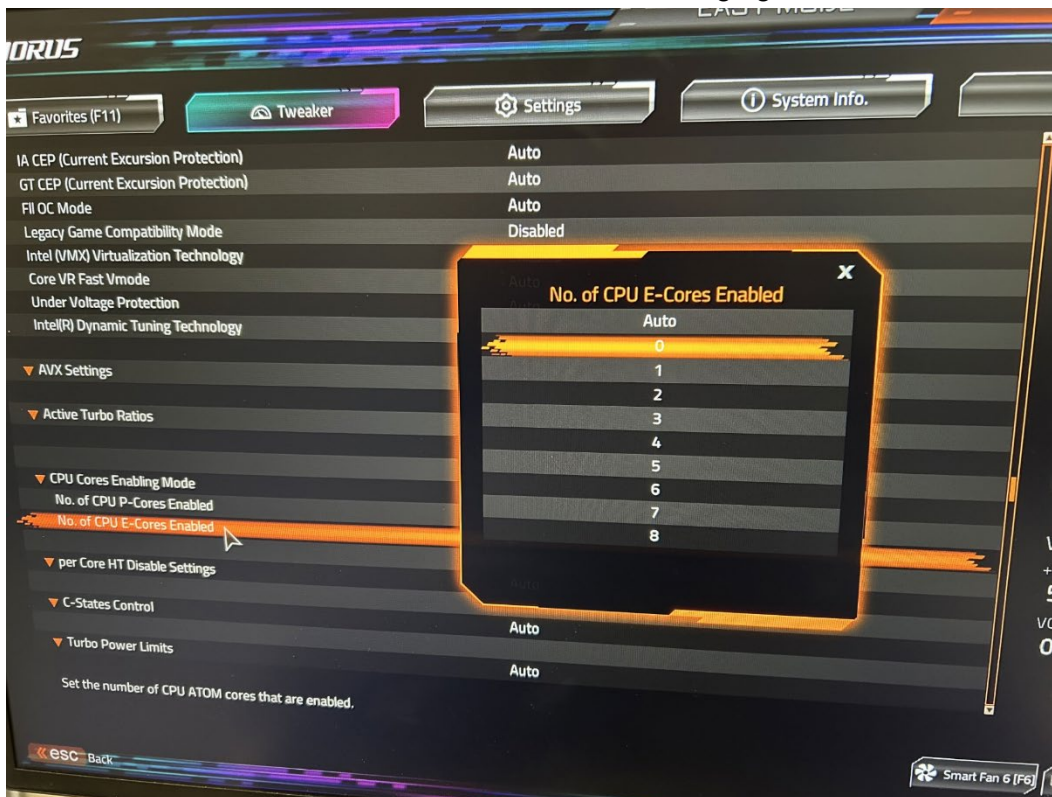

5. Select **0**. The screen is updated as in the following figure.

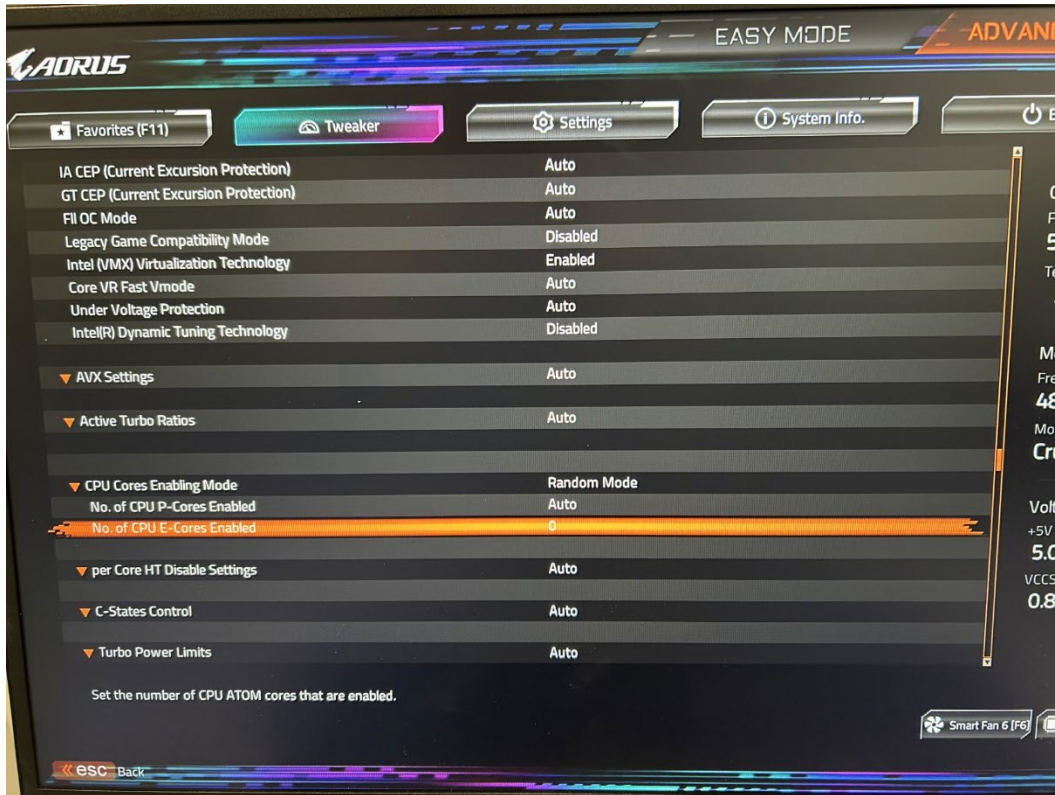

6. Select **Save & Exit** at the top of the screen.

7. Select **Save Changes & Exit**.